


Setting up a BSNL EVDO USB Modem on Hame Routers

1. Connect to the router either via your LAN or connect direct via WiFi.
2. Once connected Open a web browser.
3. Enter <http://192.168.1.1>
4. A username password screen will appear. Enter the default username and password. You will find this in the manual provided or on the base of the router.
5. Once logged in click on Wan Setting on the left hand side and then Basic Setting on the blue bar to the left of the screen
6. You will then see this screen.

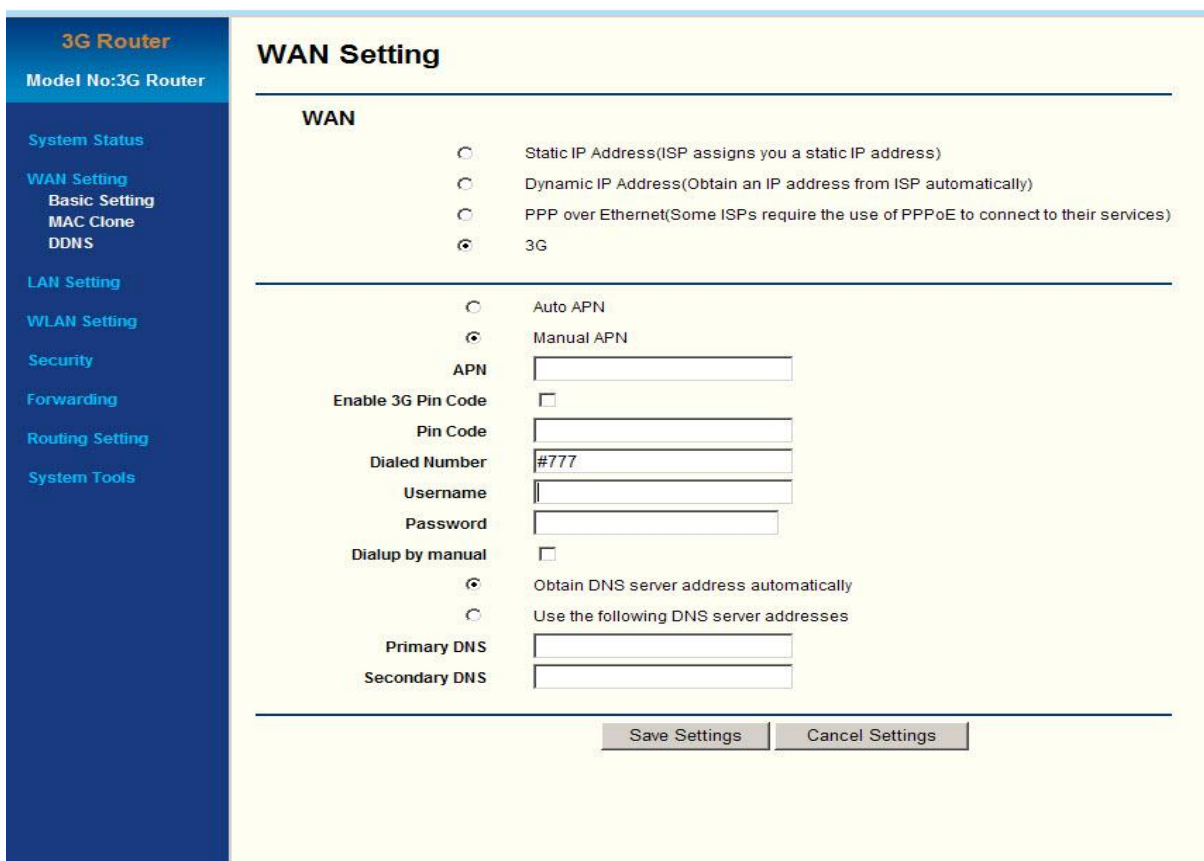

3G Router
Model No:3G Router

WAN Setting

WAN

Static IP Address(ISP assigns you a static IP address)
 Dynamic IP Address(Obtain an IP address from ISP automatically)
 PPP over Ethernet(Some ISPs require the use of PPPoE to connect to their services)
 3G

Auto APN
 Manual APN

APN

Enable 3G Pin Code

Pin Code

Dialed Number

Username

Password

Dialup by manual

Obtain DNS server address automatically
 Use the following DNS server addresses

Primary DNS

Secondary DNS

7. Select the 3G option
8. Change the setting to Manual APN
9. Now enter #777 in the dialled number box.
10. For BSNL EVDO you have to enter a username and password. The username and password is usually the mobile number issued to the data card. Please refer to the details supplied with your modem for the username and password.
11. Make sure you have Obtain DNS server address automatically ticked
12. Save your settings and now reboot the router. Once the device is rebooted it will take about 60 to 90 seconds to connect.

Supported Modems: Huawei EC168C, Huawei EC1260, Huawei K3520, Huawei E156G, ZTE AC 8710, ZTE AC 2726, ZTE AC 8700, Micromax MMX 300G, ZTE AC 2766.