


## Setting up a Reliance Netconnect Broadband+ USB Modem on Hame Routers

12. Connect to the router either via your LAN or connect direct via Wi-Fi.
13. Once connected Open a web browser.
14. Enter <http://192.168.1.1>
15. A username password screen will appear. Enter the default username and password. You will find this in the manual provided or on the base of the router.
16. Once logged in click on Wan Setting on the left hand side and then Basic Setting on the blue bar to the left of the screen
17. You will then see this screen.

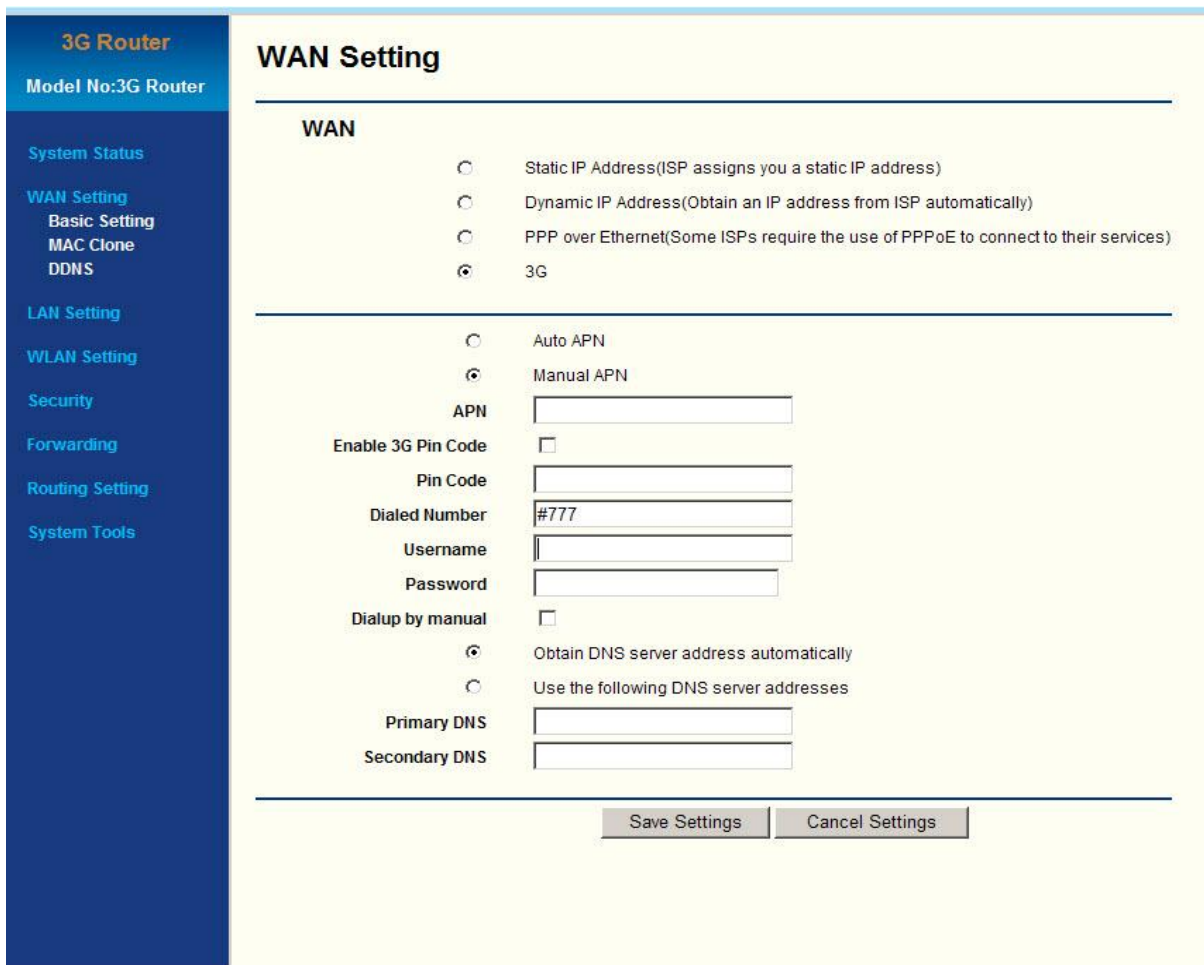

**3G Router**  
Model No:3G Router

**WAN Setting**

**WAN**

Static IP Address(ISP assigns you a static IP address)  
 Dynamic IP Address(Obtain an IP address from ISP automatically)  
 PPP over Ethernet(Some ISPs require the use of PPPoE to connect to their services)  
 3G

---

Auto APN  
 Manual APN

APN

Enable 3G Pin Code

Pin Code

Dialed Number

Username

Password

Dialup by manual

Obtain DNS server address automatically  
 Use the following DNS server addresses

Primary DNS

Secondary DNS

18. Change the setting to Manual APN
19. Now enter #777 in the dialled number box.
20. For Reliance Netconnect Broadband+ you have to enter a username and password. The username and password are usually the mobile number issued to the data card. Please refer to the details supplied with your modem for the username and password.
21. Make sure you have Obtain DNS server address automatically ticked
22. Save your settings and now reboot the router. Once the device is rebooted it will take about 60 to 90 seconds to connect.

**Supported Modem on Hame Routers:** Huawei EC168C, Huawei EC1260, Huawei EC1261, Huawei EC1262, Huawei K3520, Huawei E156G, ZTE AC 8710, ZTE AC 2726, ZTE AC 8700, ZTE AC 8710, Micromax MMX 300G, ZTE AC 2766, Any DATA 555c, Epivalley SEC 8083, Epivalley SEC 8089