


## Setting up a Tata Photon USB Modem on Dovado UMR

1. Open a web browser
2. Enter <http://192.168.0.1>
3. A username password screen will appear. Enter the default username and password. You will find this in the manual provided.
4. Once logged in click on Modem on the left hand side and then PPP on the blue bar at the top
5. You will then see this screen.

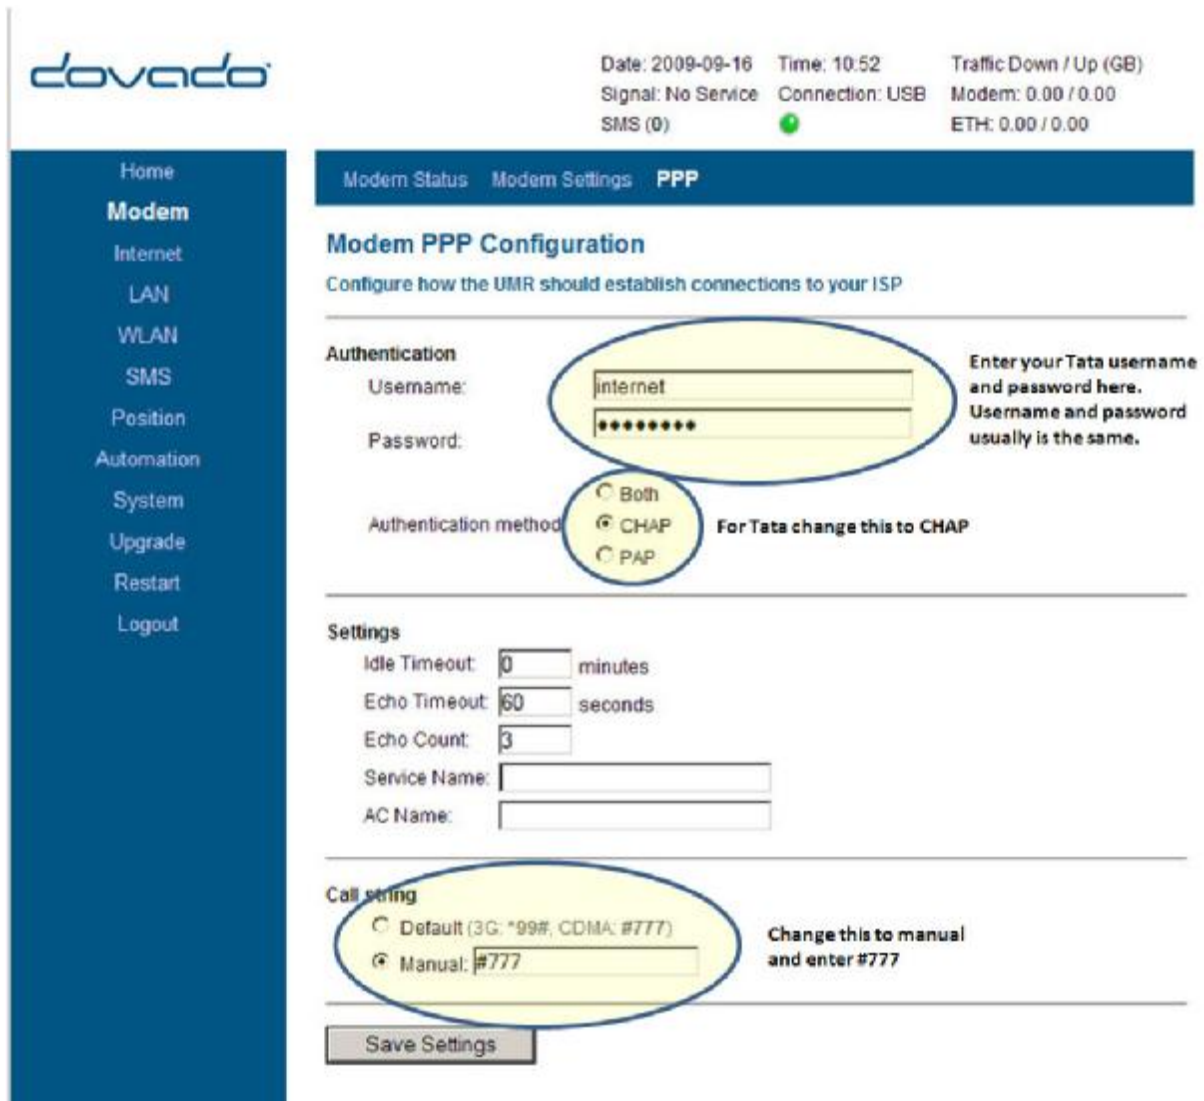

The screenshot shows the 'Modem PPP Configuration' page on the Dovado UMR interface. The page is divided into several sections:

- Header:** Date: 2009-09-16, Time: 10:52, Traffic Down / Up (GB): Modem: 0.00 / 0.00, ETH: 0.00 / 0.00. Signal: No Service, Connection: USB, SMS (0).
- Navigation:** Home, Modem (selected), Internet, LAN, WLAN, SMS, Position, Automation, System, Upgrade, Restart, Logout.
- Modem Status:** Modem Status, Modem Settings, PPP (selected).
- Modem PPP Configuration:** Configure how the UMR should establish connections to your ISP.
  - Authentication:**
    - Username:
    - Password:
    - Authentication method:  Both,  CHAP,  PAP. Note: For Tata change this to CHAP.
  - Settings:**
    - Idle Timeout:  minutes
    - Echo Timeout:  seconds
    - Echo Count:
    - Service Name:
    - AC Name:
  - Call string:**
    - Default (3G: \*99#, CDMA: #777)
    - Manual: . Note: Change this to manual and enter #777.
- Buttons:** Save Settings

6. For Tata Photon the Authentication username and password are the same. Please refer to the details supplied with your modem for this.
7. You will also need to change the call string to manual and enter #777
8. Save your settings and then click on the restart button on the left hand side.
9. Once the device is rebooted it will take about 60 to 90 seconds to connect. When it's connected you will see a green dot at the top of the administration screen.
10. Happy surfing.